



# Bath Oasis

VANITY COMFORT


## Series "Wave"

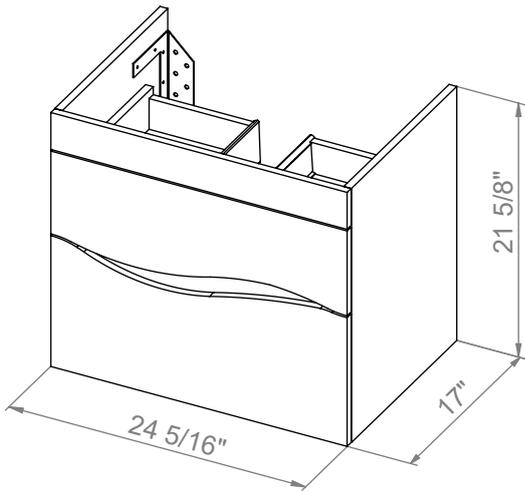


**WAVE-W-S-26**

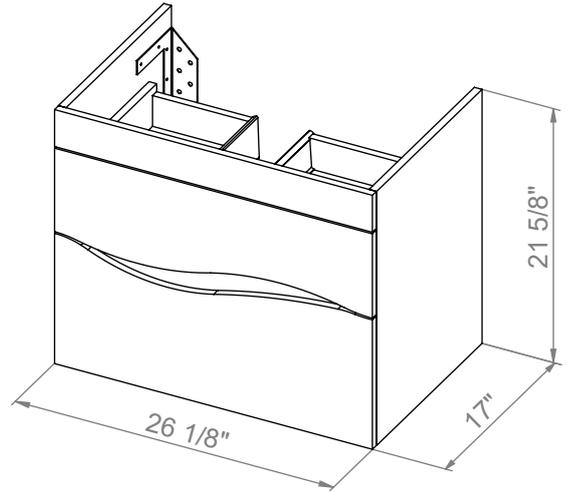

**WAVE-W-S-28**

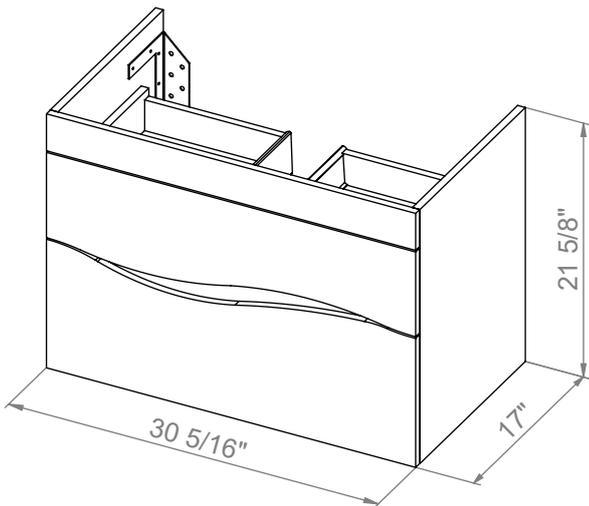

**WAVE-W-S-32**

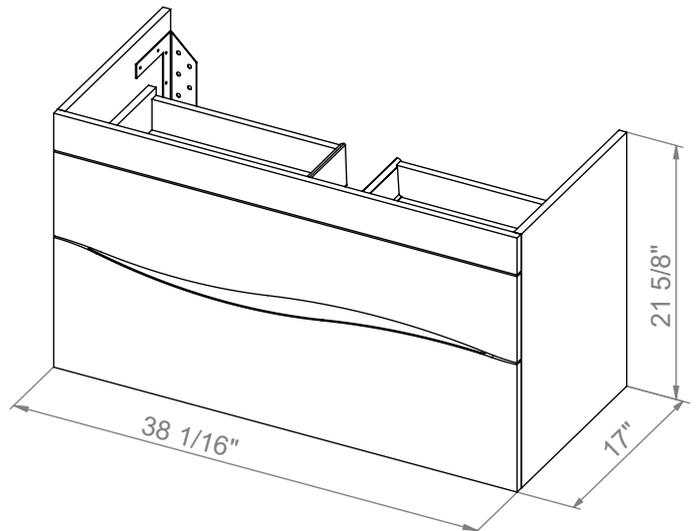

**WAVE-W-S-40**

Contacts:



+1(332)777-7005

sales@bathoasis.us



8 New Hook Rd, Bayonne, NJ 07002

www.bathoasis.us



**26"** 24 5/16" x 17" x 21 5/8"

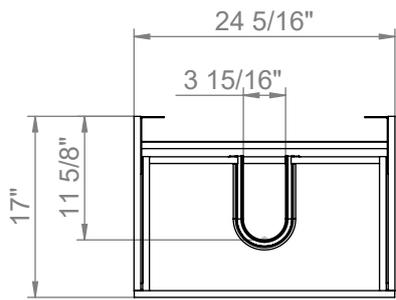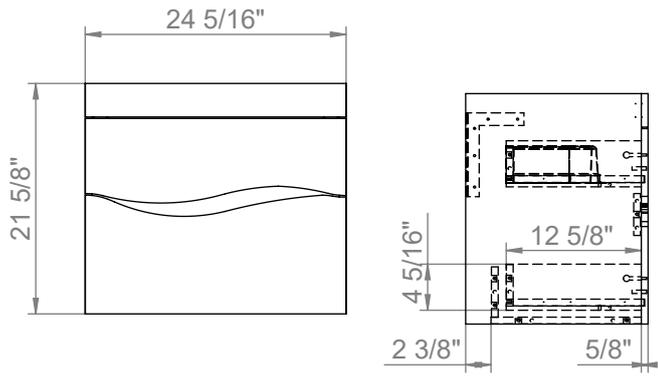



**28"** 26 1/8" x 17" x 21 5/8"

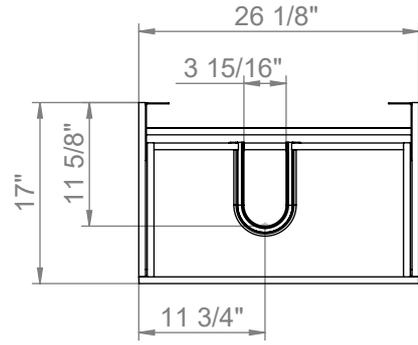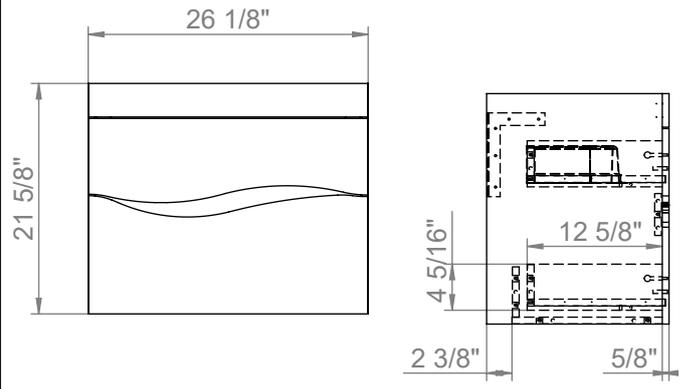


**32"** 30 5/16" x 17" x 21 5/8"

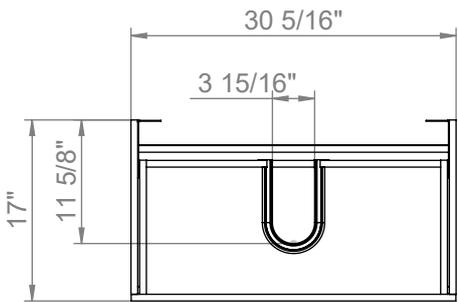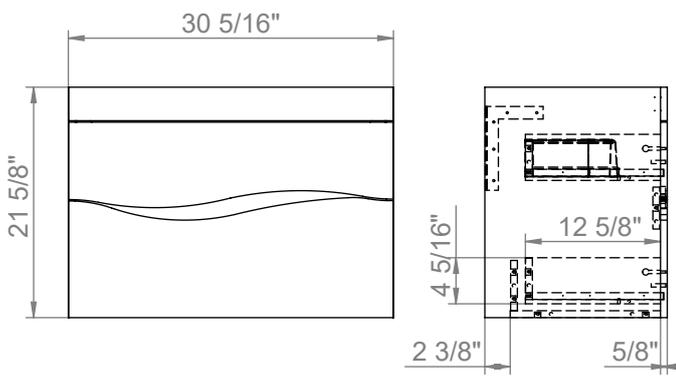


**40"** 38 1/16" x 17" x 21 5/8"

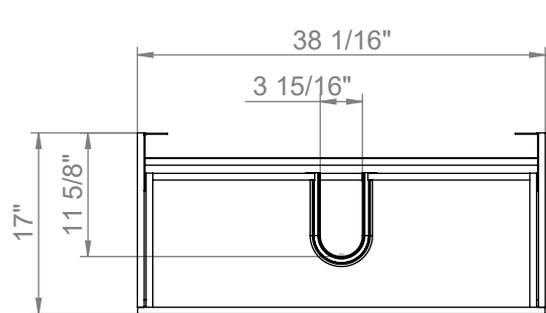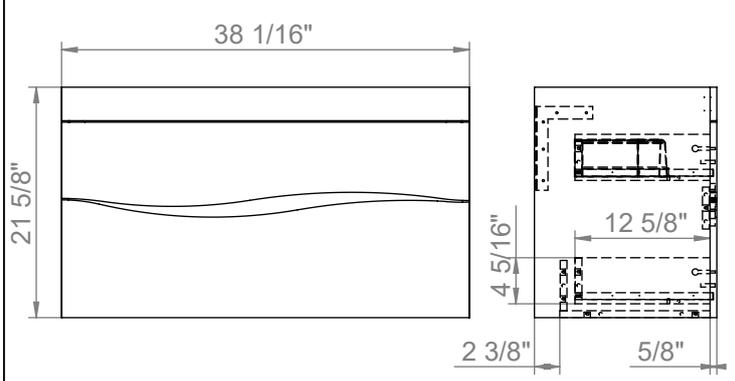

## TOOLS REQUIRED FOR ASSEMBLY

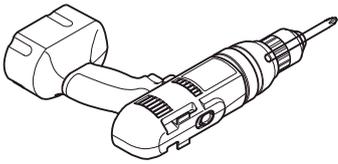


Electrical Drill



Drill Bit



Bolt Bit

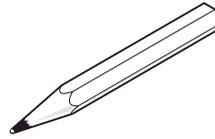


Pencil




Tape Measure




Phillips  
Screwdriver

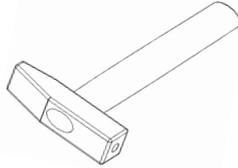

Hammer

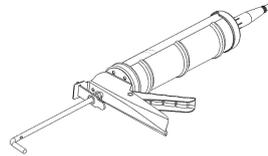

Silicone

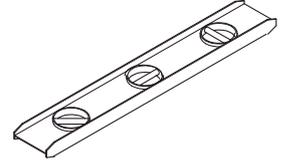

Level

## FURNITURE

(A)



4 PCS


(B)



4 PCS


## Wall Preparation

The recommended height for a console cabinet with sink is 33-1/2". This requires installing a 14" wide wood panel to a height of 34-1/4". If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

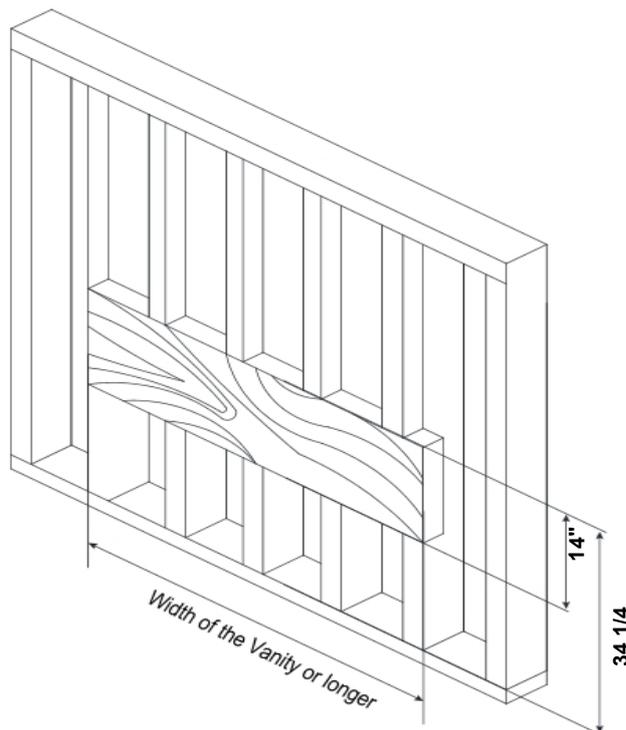


# STEP 1.

**Marking for the cabinet**  
Having decided on the location of the cabinet, we mark and drill holes in the wall measuring the distance A, B, C

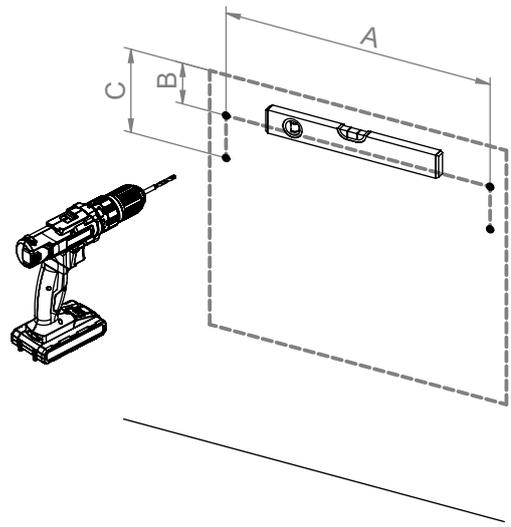


# STEP 2.

**Install the cabinet on the drilled holes**

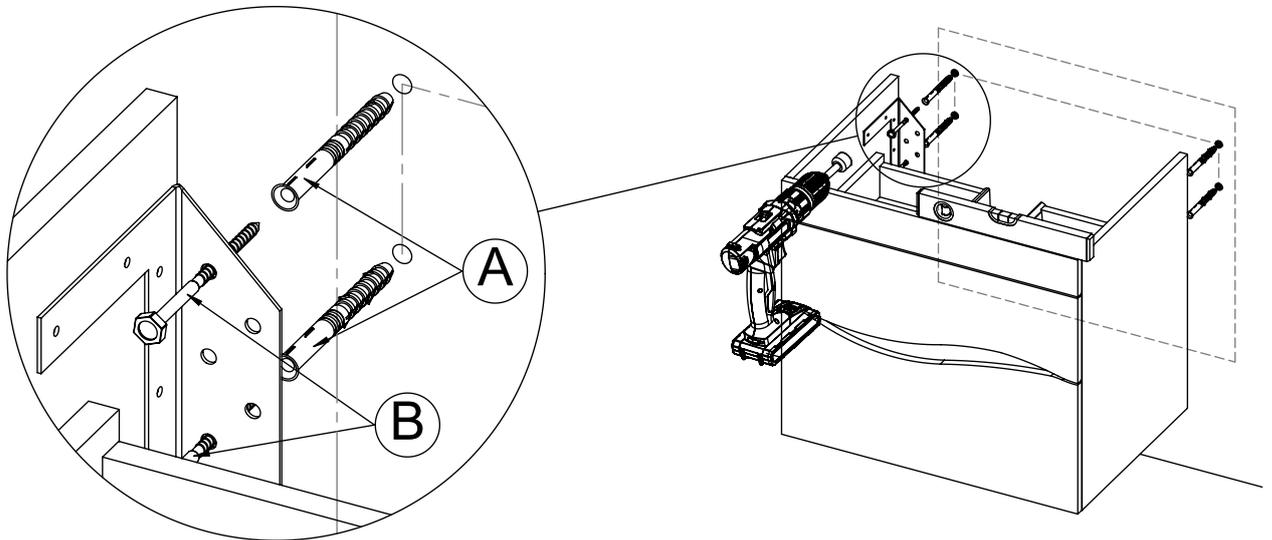

# STEP 3.

**Install sink top with Silicone**

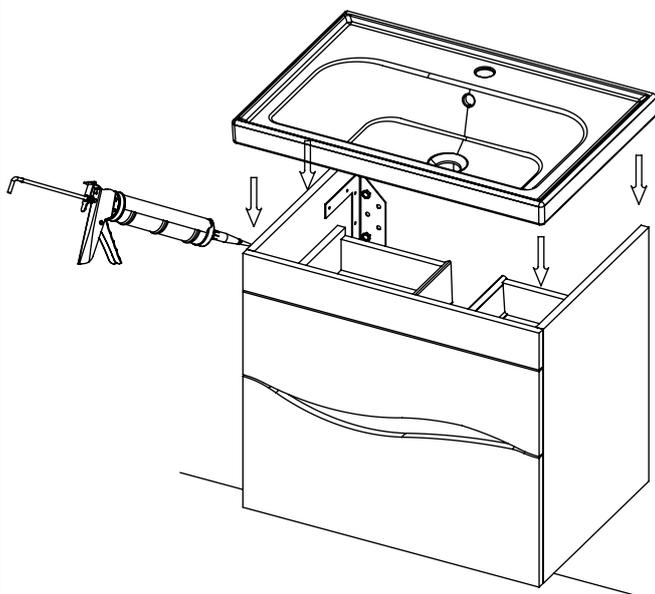

# STEP 4.

**Fill the side against the wall with Silicone and finish**

