




Series "Woodmix"



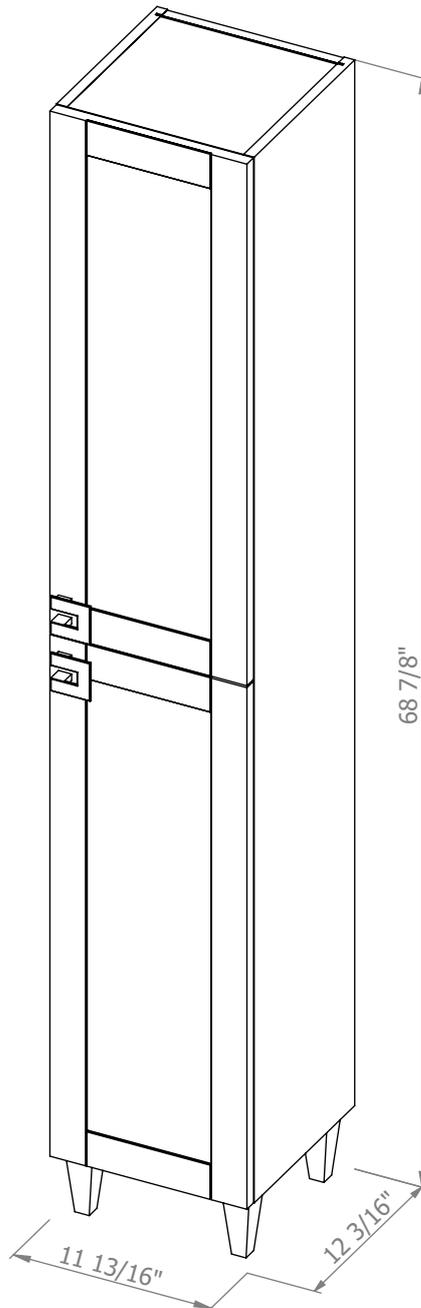


Contacts:
+1(332)777-7005
sales@bathoasis.us
8 New Hook Rd, Bayonne, NJ 07002
www.bathoasis.us


WMIX-SPW-12

12"


11 13/16" x 12 3/16" x 68 7/8"

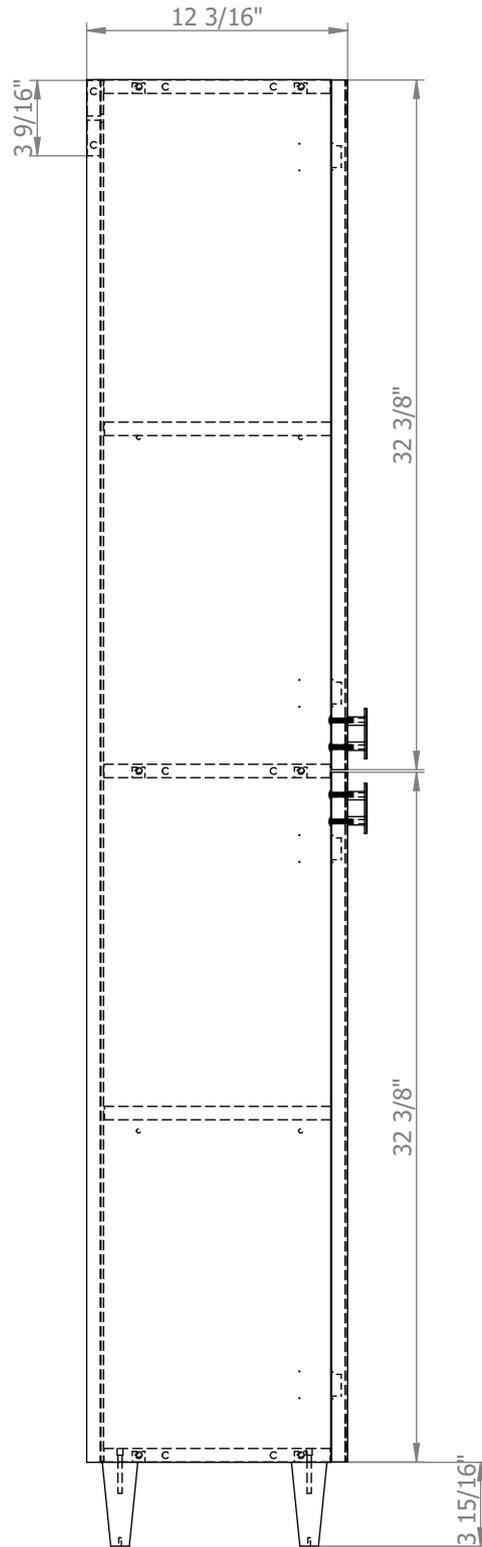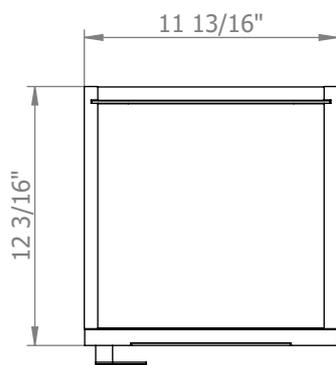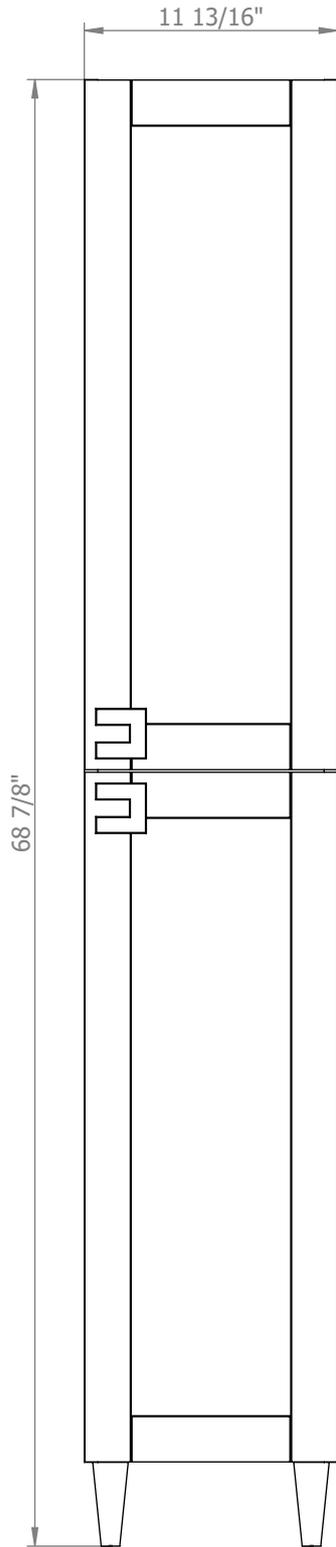


TOOLS REQUIRED FOR ASSEMBLY

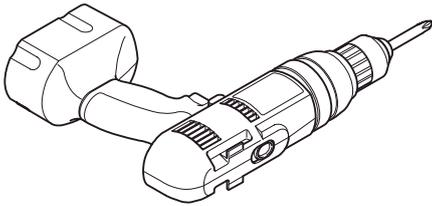


Electrical Drill

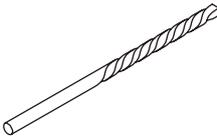

Drill Bit

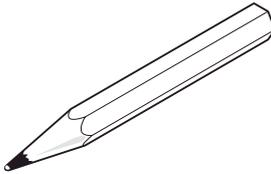


Pencil

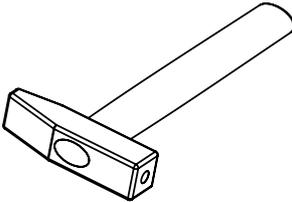


Hammer



Phillips
Screwdriver

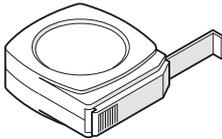


Tape Measure

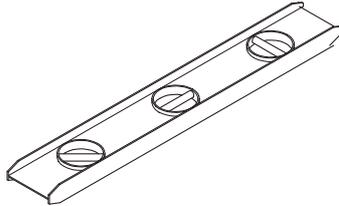

Level


FURNITURE

A

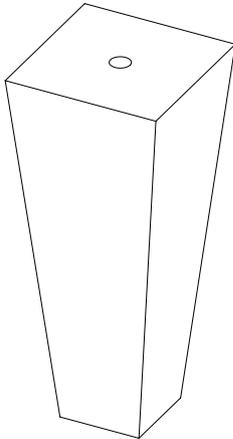


4 PCS

B

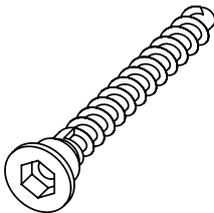

4 PCS

C

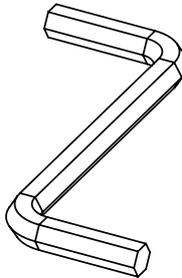


1 PCS

D



14 PCS

E

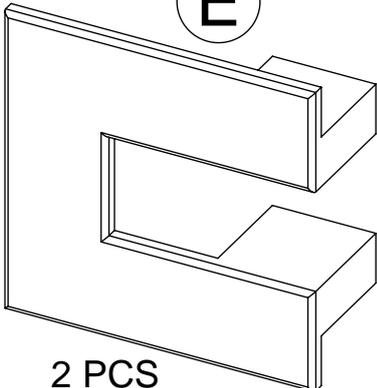


2 PCS

F




4 PCS

G

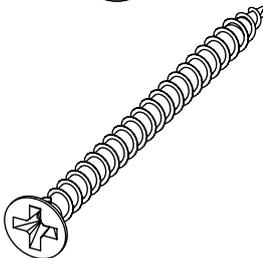

2 PCS




H

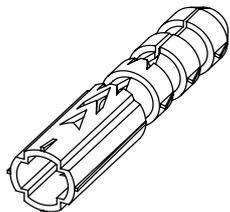

2 PCS

STEP 1.


Installation of furniture support

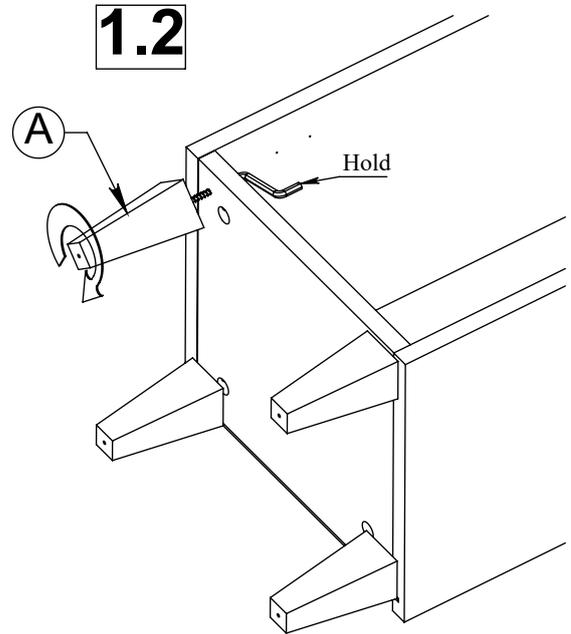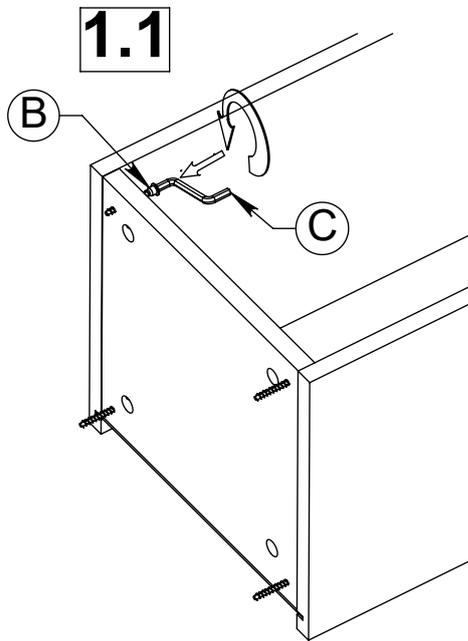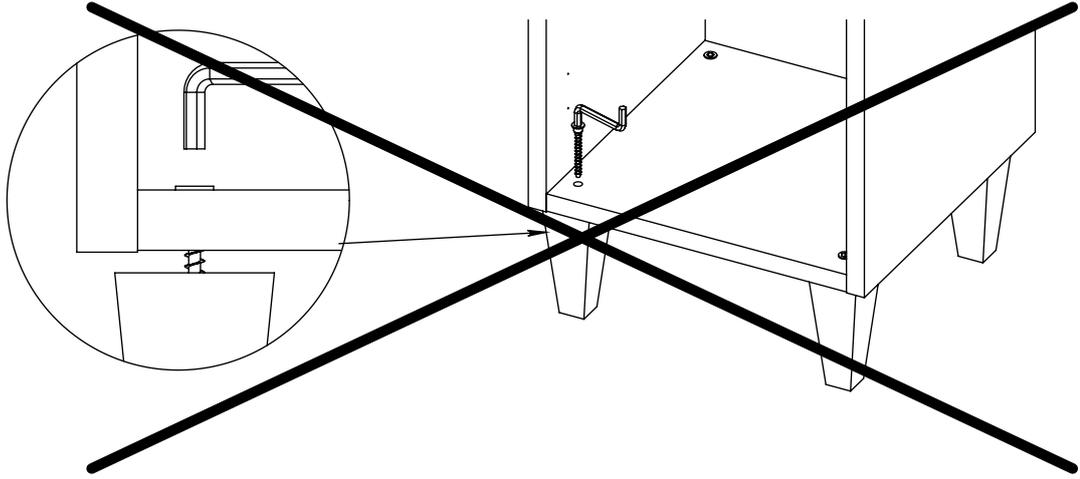

STEP 2.

Cabinet positioning and installation


Install at the installation site, adjust and fix

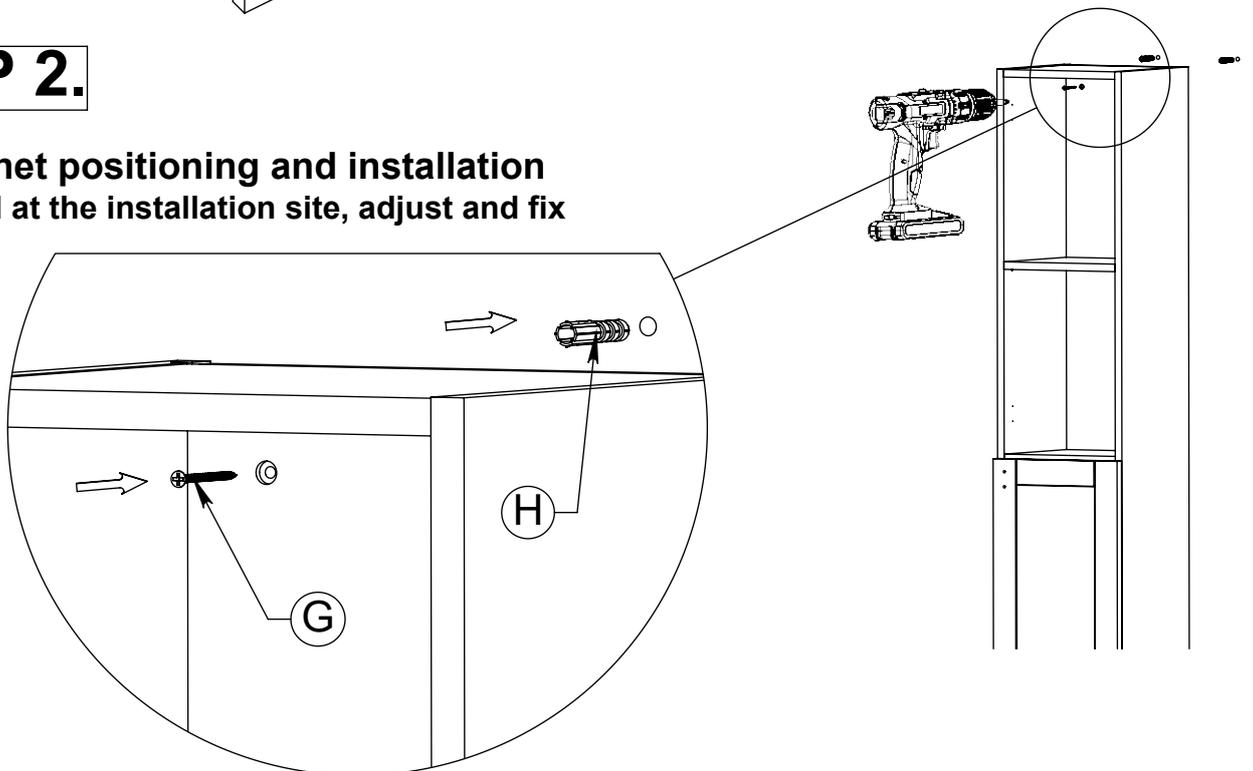

Changing the door from right to left


STEP 1.

Unscrew the mounting bars and remove the doors with hinges.

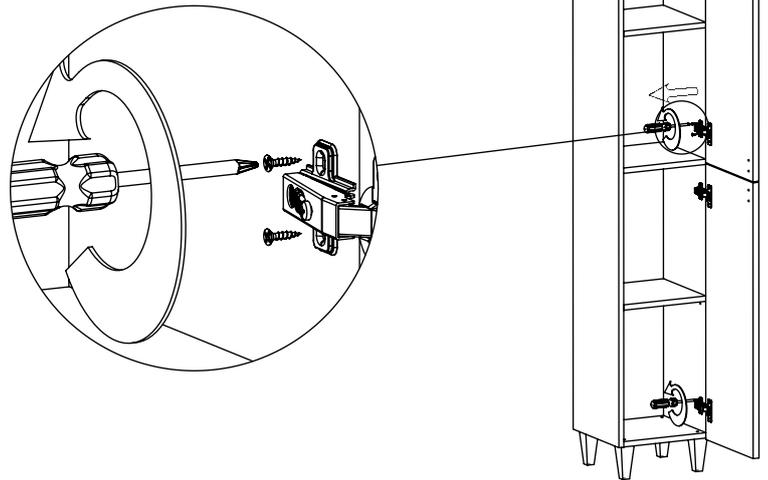


STEP 2.

Turn the doors by 180°

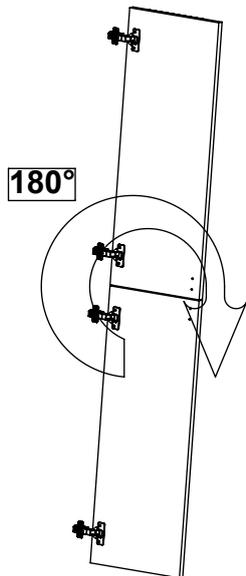

STEP 3.

On the left side, we mount the doors on. Attach the handles to the doors.

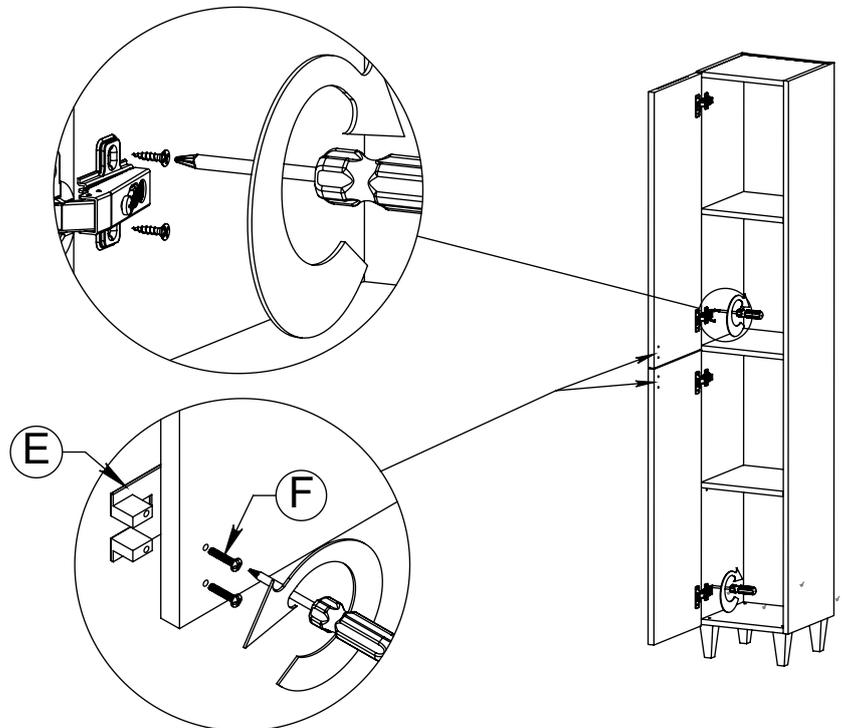

STEP 4.

Adjusting the door

