





Series "Delux"

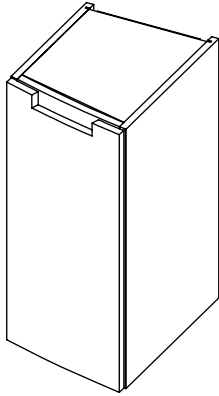


DEL-SVC-12L



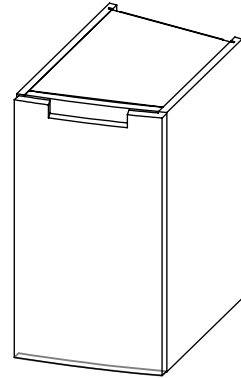


DEL-SVC-12R

12" 11 11/16" x 16 5/16" x 23 5/8"

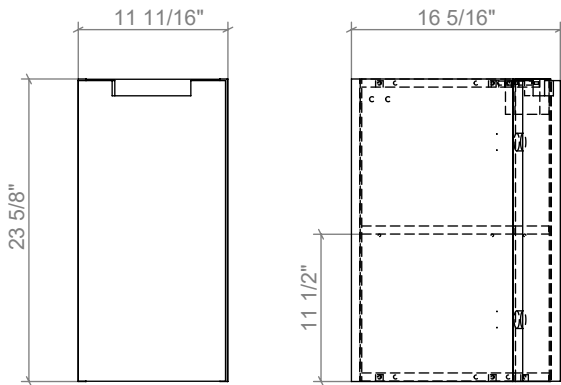


12" 11 11/16" x 16 5/16" x 23 5/8"

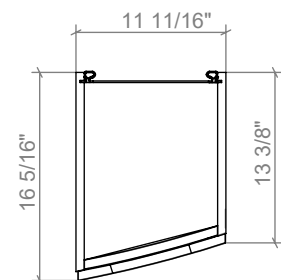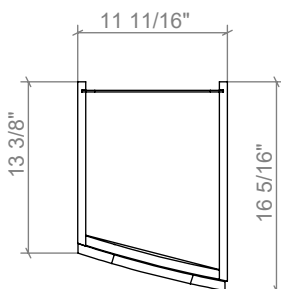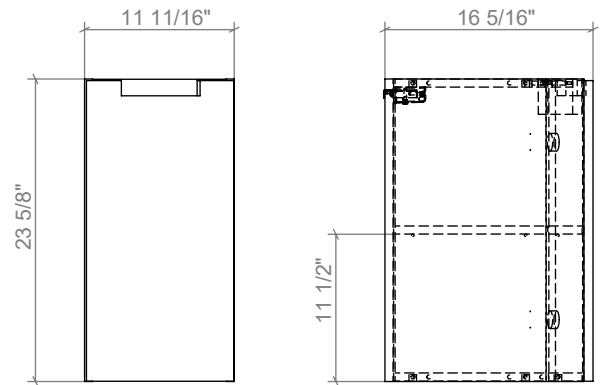


Contacts:
+1(332)777-7005
sales@bathoasis.us
8 New Hook Rd, Bayonne, NJ 07002
www.bathoasis.us


TOOLS REQUIRED FOR ASSEMBLY

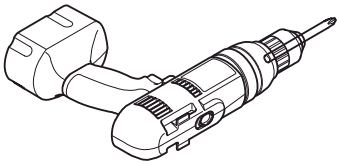


Electrical Drill




Drill Bit



Bolt Bit

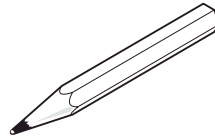


Pencil




Tape Measure




Phillips
Screwdriver

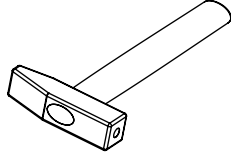

Hammer

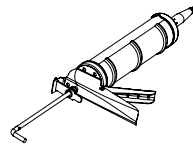


Silicone

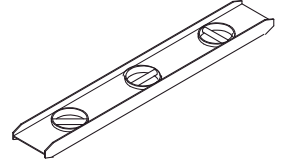

Level


FURNITURE

A

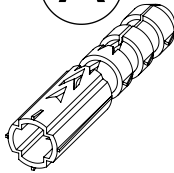


6 PCS

B

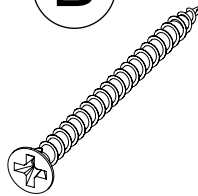

6 PCS


C

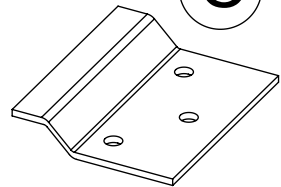

2 PCS


Wall Preparation

The recommended height for a console cabinet with sink is 33-1/2". This requires installing a 14" wide wood panel to a height of 34-1/4". If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

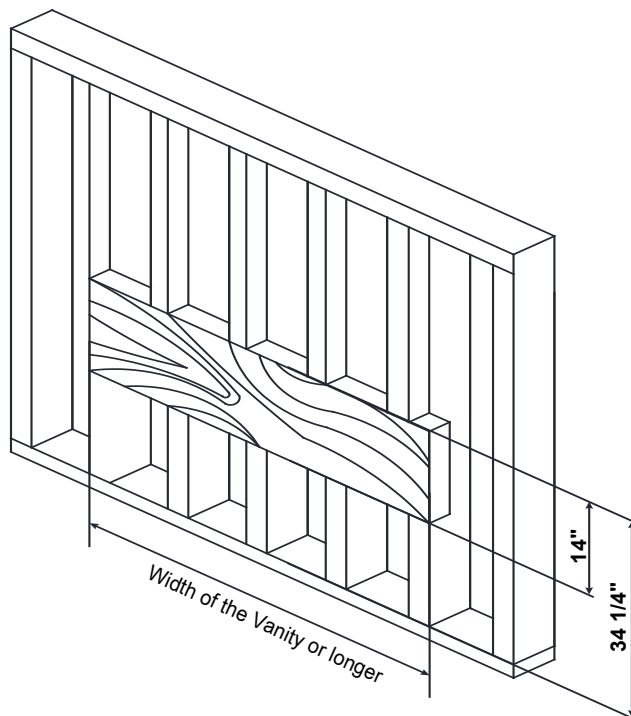


STEP 1. Marking for the LR cabinet

Having decided on the location of the cabinet, we mark and drill holes in the wall and fix the bracket on the wall

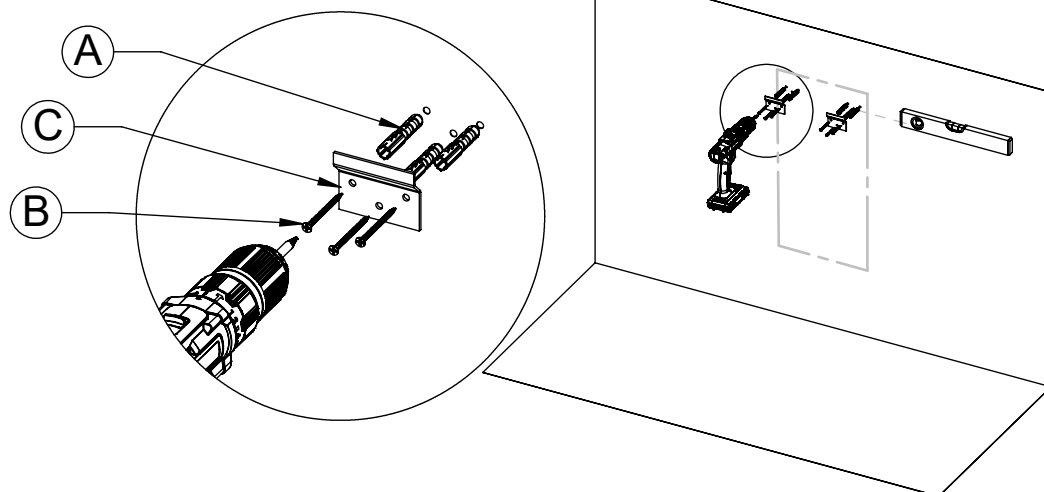


STEP 2.

Install the cabinet on the bracket, adjust the level and pull it to the wall using the bracket

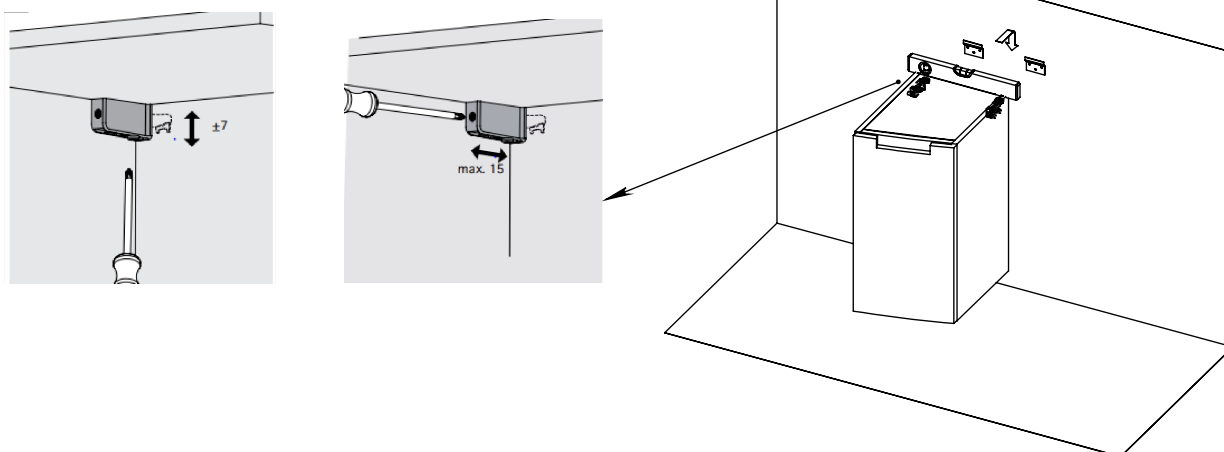


STEP 3.

Install table top on top with Silicone

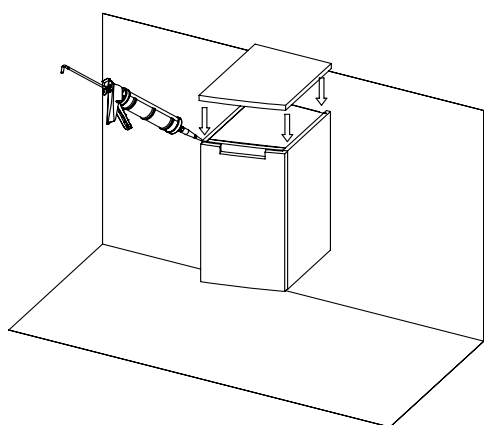

STEP 4.

Fill the side against the wall with Silicone and finish

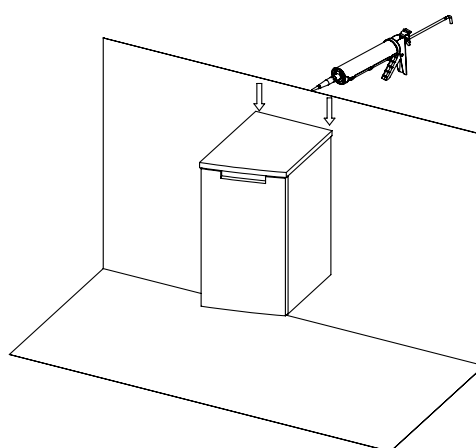

STEP 5. Adjusting the door

