





VANITY COMFORT


Series "Delux"

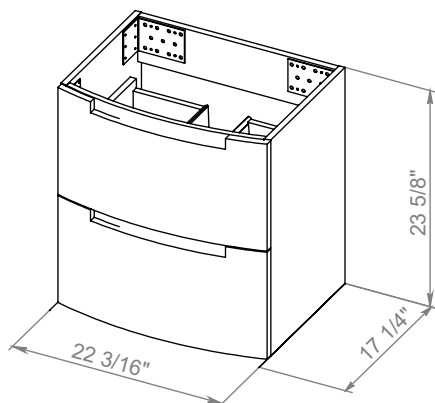


DEL-W-S-24

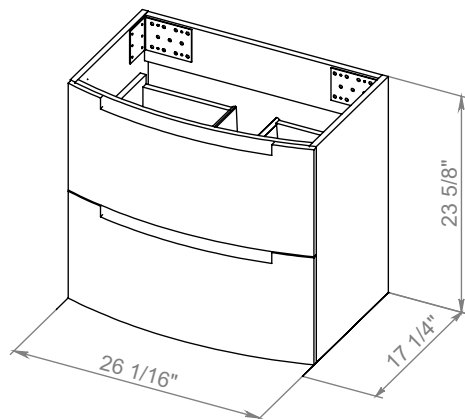

DEL-W-S-28

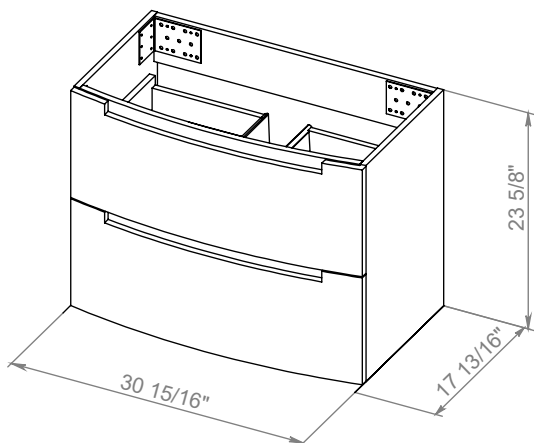

DEL-W-S-32

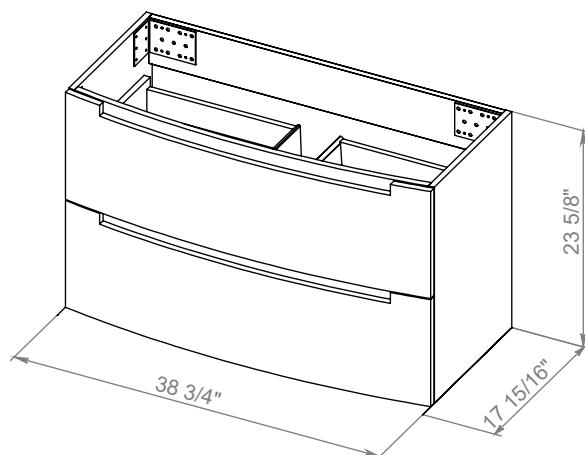

DEL-W-S-40

Contacts:


+1(332)777-7005

sales@bathoasis.us


8 New Hook Rd, Bayonne, NJ 07002

www.bathoasis.us


24"

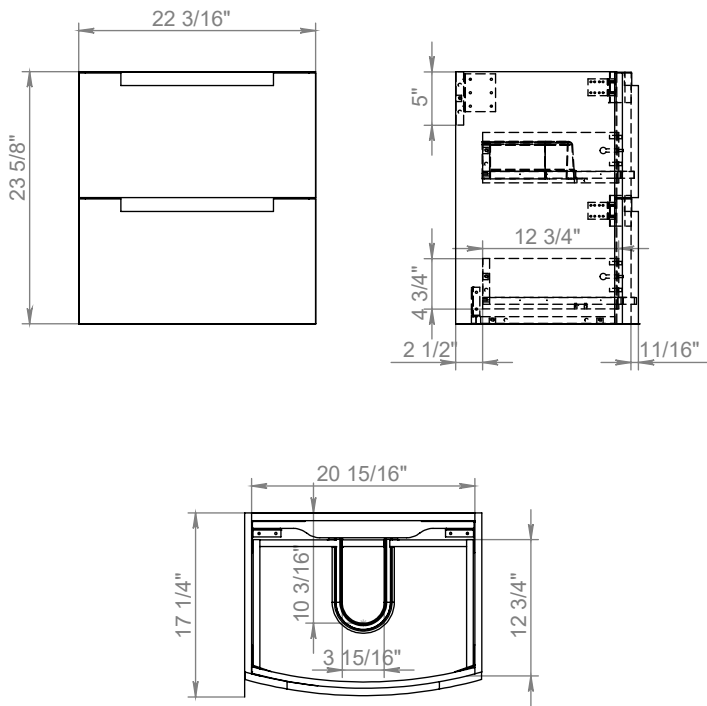


28"

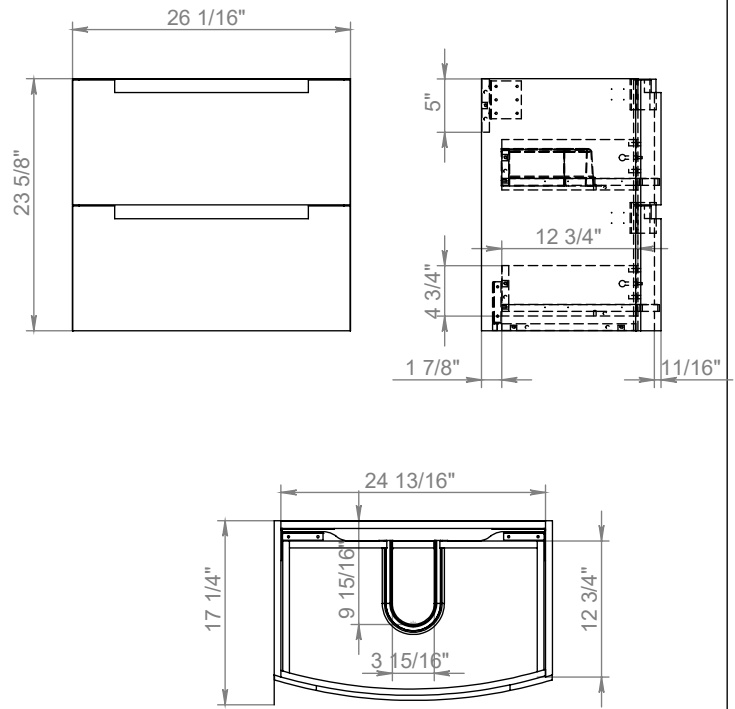


32"

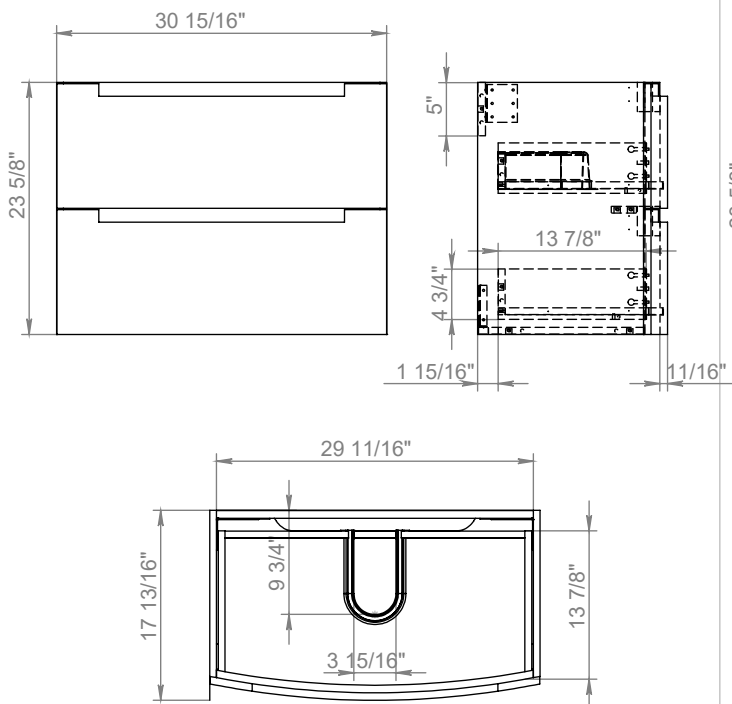


40"

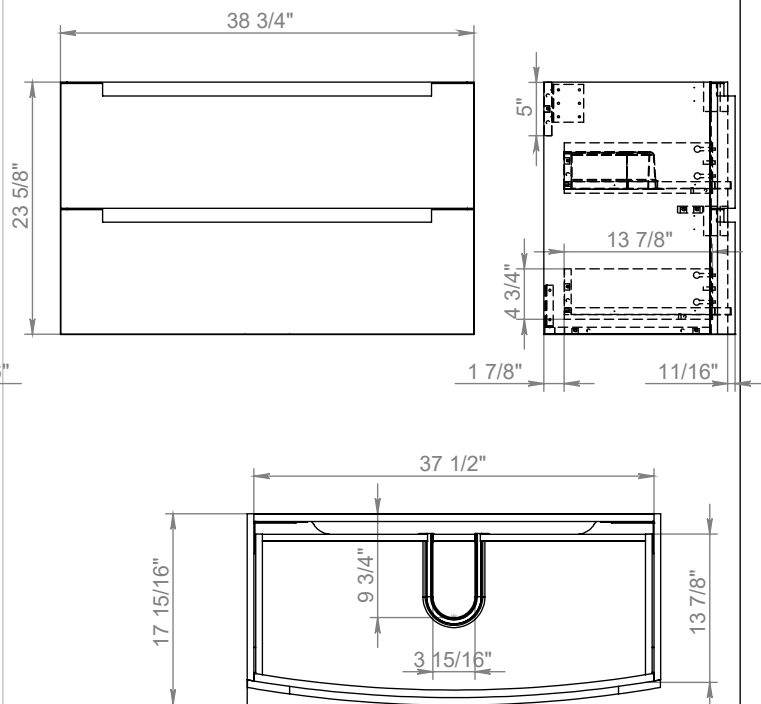

TOOLS REQUIRED FOR ASSEMBLY

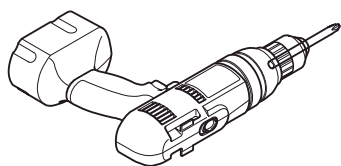


Electrical Drill




Drill Bit



Bolt Bit

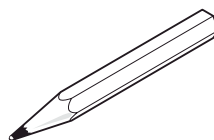


Pencil




Tape Measure




Phillips
Screwdriver

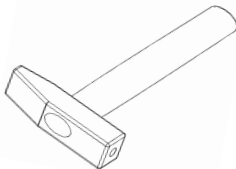

Hammer

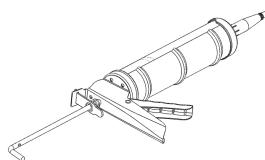

Silicone

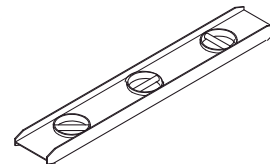

Level


FURNITURE

Ⓐ



4 PCS


Ⓑ

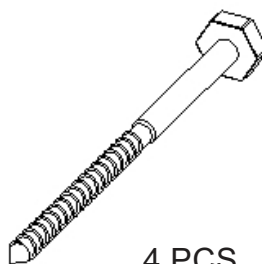

4 PCS

Wall Preparation


The recommended height for a console cabinet with sink is 33-1/2". This requires installing a 14" wide wood panel to a height of 34-1/4". If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

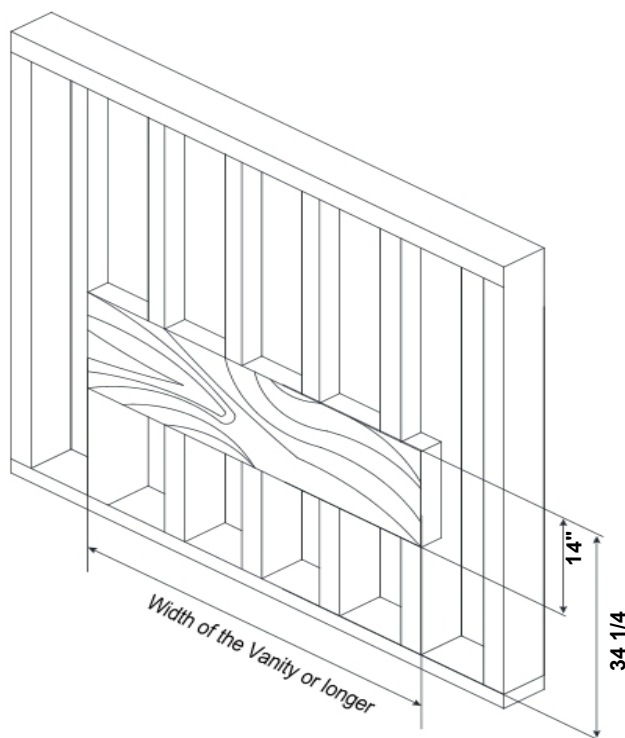

STEP 1.



Marking for the cabinet

Having decided on the location of the cabinet, we mark and drill it, having measured dimensions A, B, C by level

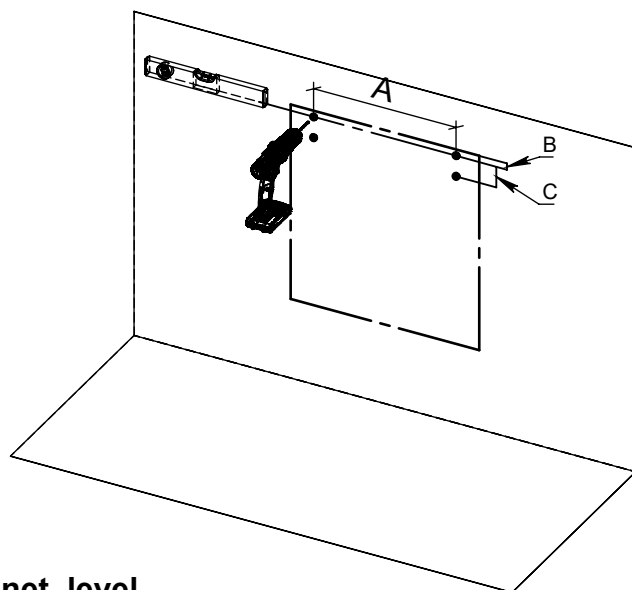


STEP 2.

In pre-drilled holes we fix the cabinet, level

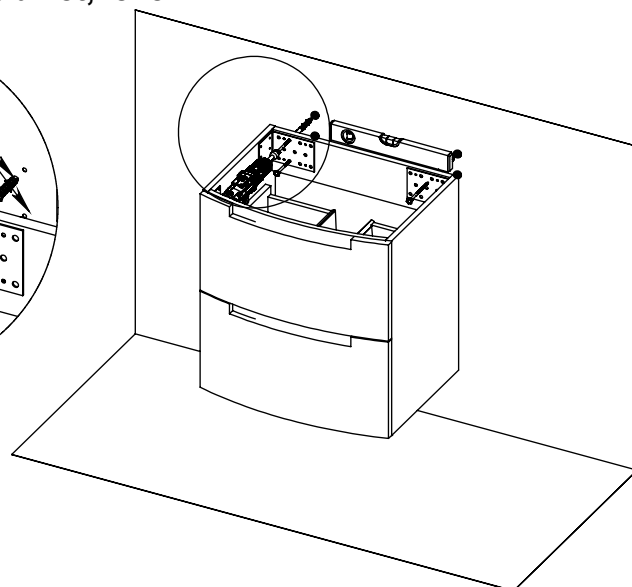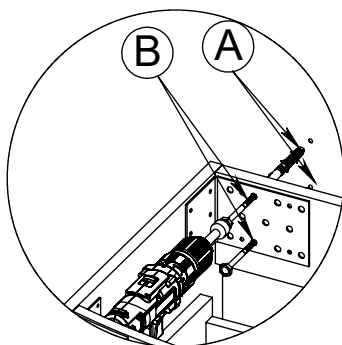


STEP 3.

Install sink top with Silicone

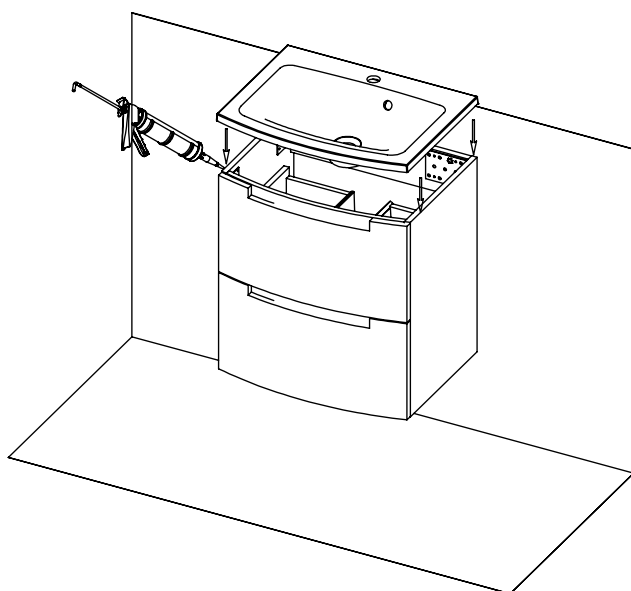


STEP 4.


Fill the side against the wall with Silicone and finish

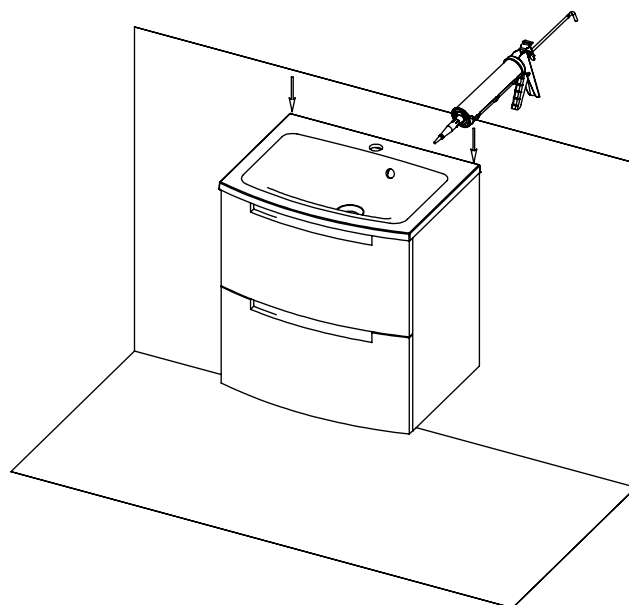


1

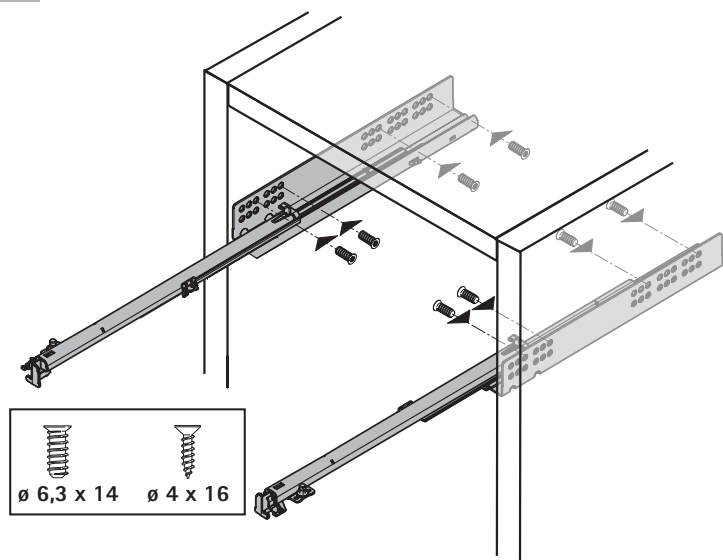

2

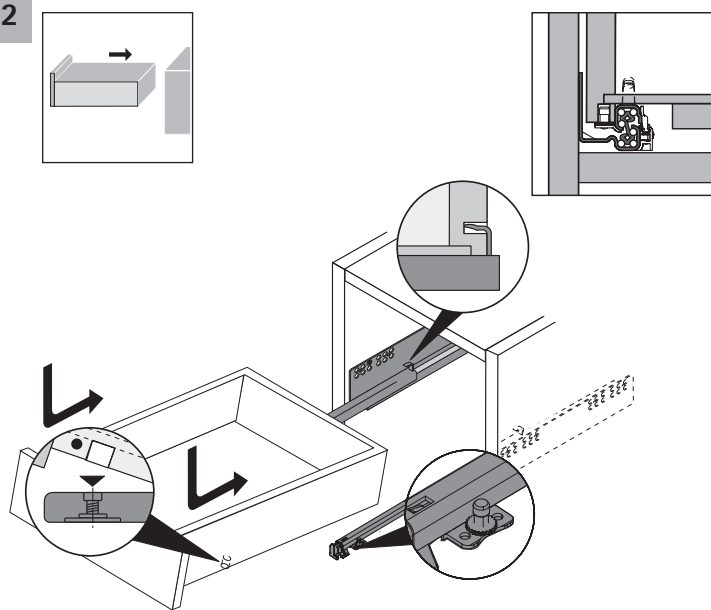

3

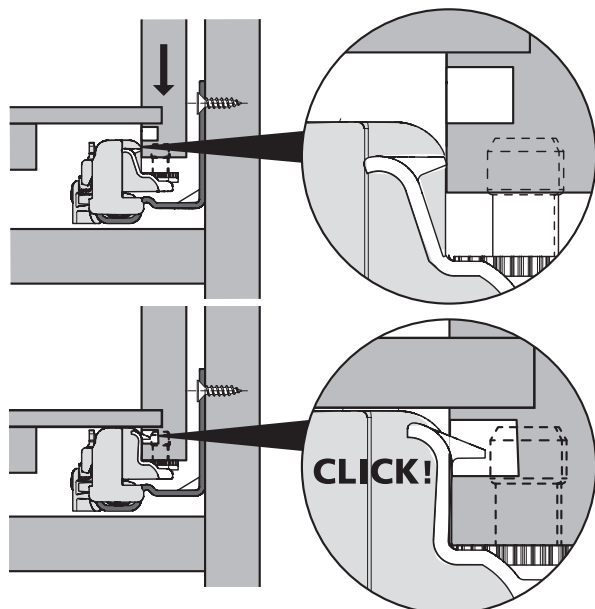

i

